




Remove contents of drawstring bag. Begin by applying the fabric cover.



Apply the velcro of the cover to the corresponding velcro of the square hubs.



Begin at the stage opening and work your way to the top outside corner.

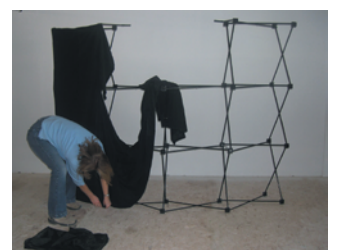

Stretch and smooth the fabric cover as you attach the velcro to the middle and bottom squares.



Work towards the center of the stage. Continue to line up the



top squares of velcro, then the middle and then bottom.



Work towards the other side of the stage, smoothing the fabric covering as you go.



Secure the fabric covering at the corner hubs.



Pull the covering around the back edge, attaching to the velcro hubs in the back.



Attach the velcro of the side stage flaps to velcro hubs in the back.




Unfold and place the playboard on the stage opening,



Attach the velcro to the fabric covering in the front of the stage and the velcro hubs in back.



Insert the L-shaped curtain rod extenders into the open metal tubes of the stage.

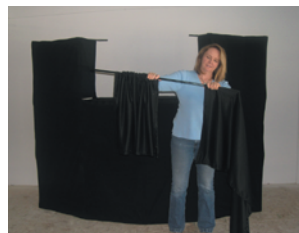

Straighten the curtain rod, slip the two curtains on to the ends of the rod.



Insert the curtain rod into the other end of the L-shaped rod extender.



Repeat process on other side.



The depth of the stage area is adjustable.



For average sized puppets, push the curtain rod extenders into the metal tube.



For larger puppets and stage opening, pull the curtain rod extenders out for more space.



Now it's time to have FUN!